

VERITY®

2024 REC02U INSTALLER'S GUIDE

This manual has the necessary instructions.

Headers in RED are possible customization items. There are screenshots of settings that may need to be addressed, such as setting what channels to record.



Verity has preset every option requested (10/2020) on all LDV REC02U units prior to shipping.

Password: Disabled **ACC Delay:** 60 mins.

* **Format:** NTSC * **Language:** English

* **Record all** cameras when ACC is ON (Powered)

At Verity, think English, NTSC, and all 4-camera recording by default.

Tech support 574-807-6004 online information: www.veritysafe.com/ldv

DO NOT DUPLICATE OR GIVE TO END-USER © 2024 Subject to change

2024 REC02U LDV OEM INSTALL GUIDE

A new Class 10 128 GB SD card has been formatted and installed.

Note: Once the DVR is activated, it will start recording;
Always check your surroundings.

Table of Contents | **Bold titles for LDV installation**

Tech Support.....	3
Video Recording Sign.....	3
SYSTEM OVERVIEW.....	4
Remote Overview.....	6
Installation.....	8
Power Cable.....	8
Placement.....	9
OPTIONAL: ADD02CP.....	10
Front Video Audio Out.....	11
Connecting Harnesses.....	12
Metal Connector Tamper-resistant Cover.....	12
REC03 DVR with GPS.....	13
Antenna Location.....	13
USER LOGIN (password).....	15
M-STREAM (Sets which channels record).....	16
ADD/MODIFY USER End-user.....	22
DELETE USER End-user.....	23
RECORD BASIC SETUP End-user.....	24
RECORDING SCHEDULE End-user.....	25
DISPLAY SETUP End-user.....	26
FLIP MIRROR IMAGING.....	29
TRIGGER ACTIVATION.....	30
G-SENSOR SET-UP.....	33
SEARCH OPTIONS.....	35

Tech support 574-807-6004 online information: www.veritysafe.com/ldv

DO NOT DUPLICATE OR GIVE TO END-USER © 2024 Subject to change

Tech Support: 575-807-6004, 7 am to 5 pm EST

After Hours: 574-596-2151

(This cell number is also the mobile number for submitting photos.)

Sales and Billing 574-807-6005

Bill Verity's email: billy@veritysafe.com

The Service Ticket form is on our homepage - www.verityrvs.com

Video Recording Sign

Because of the legality of the recording, we are providing the sign below in each DVR. Each state has different laws. Some states have different laws, county by county. One vinyl adhesive sign is included with each DVR.





ALL information, manuals, line drawings, and cheat sheets are available on the LDV support pages www.veritysafe.com/ldv

Tech support 574-807-6004 online information: www.veritysafe.com/ldv

DO NOT DUPLICATE OR GIVE TO END-USER © 2024 Subject to change

4 2024 REC02U LDV OEM INSTALL GUIDE

SYSTEM OVERVIEW

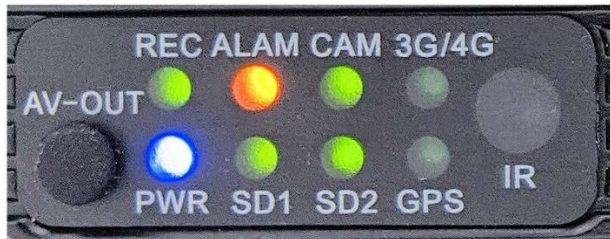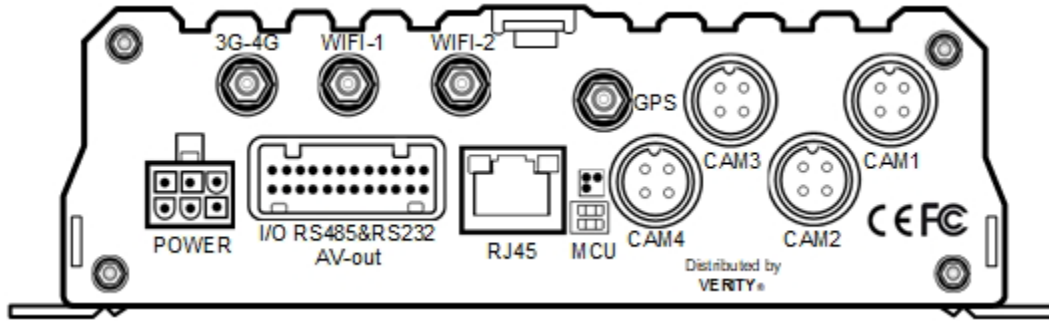

SIM A slot does not apply to the REC02U











Metal Connector Tamper-resistant Cover

Rear security cover helps prevent tampering or damage to the cable connection on the back of the REC02U.




Tech support 574-807-6004 online information: www.veritysafe.com/ldv

DO NOT DUPLICATE OR GIVE TO END-USER © 2024 Subject to change

	
<p>DVR</p>	<p>REMOTE</p>
	
<p>CABLE CONNECTION COVER</p>	<p>FRONT AV CABLE</p>
	
<p>AV OUT / SENSORS</p>	<p>POWER CABLES</p>
	
<p>KEYS & ACCESSORIES</p>	<p>MANUAL</p>

Remote Overview

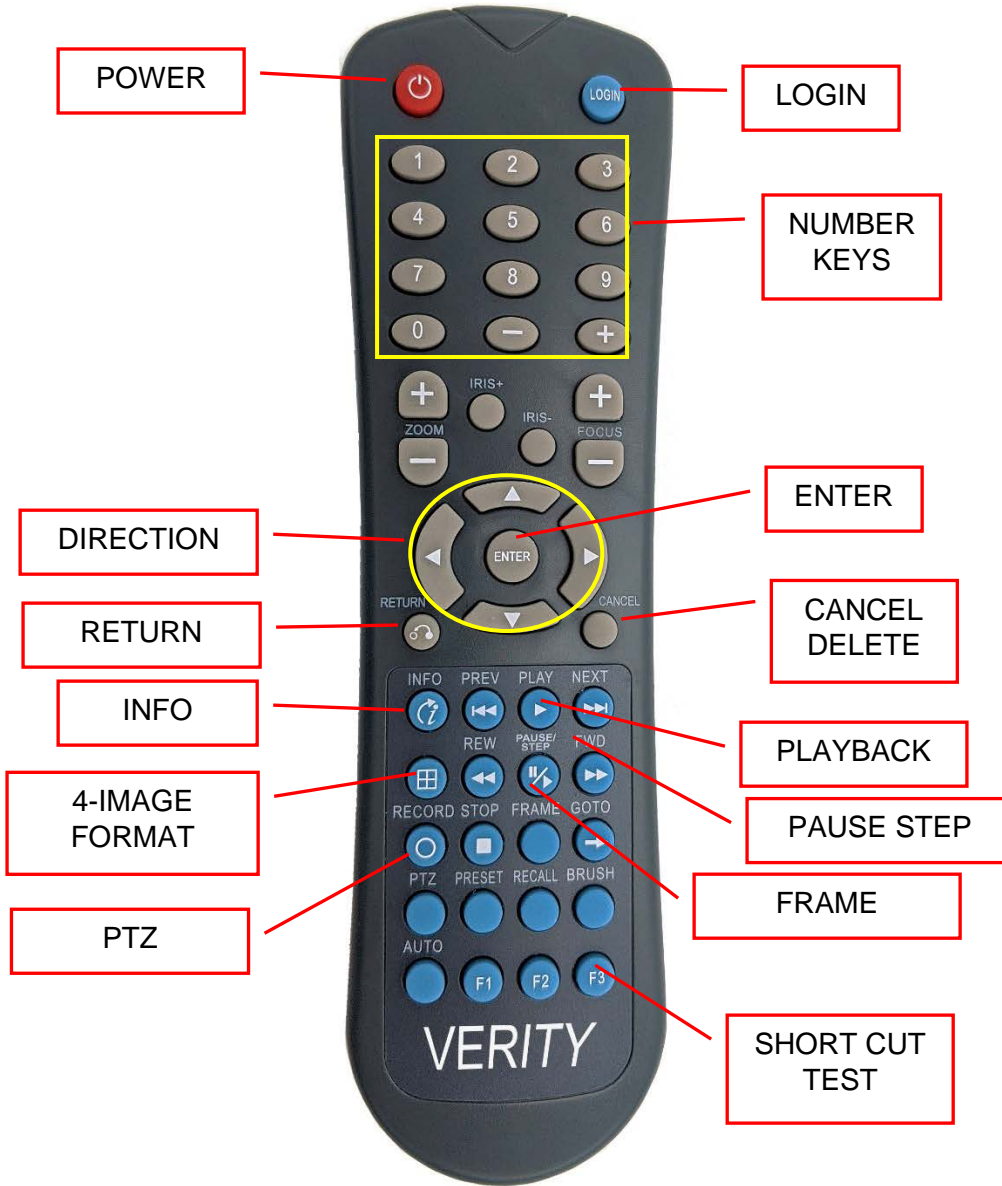

LOGIN: When the recorder is set with a password, press the Login key to input your password.

KEY POINT: Because of security reasons, the DVR does not provide recovery and reset features. Always keep a copy of your password written down.

7 2024 REC02U LDV OEM INSTALL GUIDE

INFO: Check DVR information

Quad 4 Image Format: Number keys 1, 2, 3, 4 on the monitoring interface, are used to switch between quad view and single view; press the Quad View key to display 4 screens. You can press number 1/2/3/4 to display channel 1, channel 2, channel 3, and channel 4, respectively.

RETURN: Return to the previous menu and exit from the setup menu to the monitoring interface.

PAUSE/STEP: Used to pause playing or play images at a single step. Press the key again to recover normal play speed.

FRAME: Press this key to play a video at a frame rate.

PLAY: Press this key to start playing (search the video file to be played and select, then press the key to play it.)

FWD Forward key in four categories: 2X,4X,8X,16X

REW Rewind key in four categories: 2X,4X,8X,16X

NEXT: Page down or roll to the next file

PREV: Page up or previous file

Important: Make sure the remote is facing the front of the DVR during remote operations.



ADD02CP is an optional item

For applications where an IR extender is needed, our IR extender will allow you to place the DVR hidden behind a wall and use our ADD02CP. This IR/LED panel has a 16-foot extended cable. This panel provides feedback on the operation of the DVR. Never miss another recording due to issues that may occur over the years.

PWR: Power-on light.

REC: Record light recording.


HDD: For hard drive units: flashes when recording

ALM: Indicates an "Alarm" event

V-LOSS: Video loss light flashes when the video is lost.

ERR Error light

IR: IR receiver

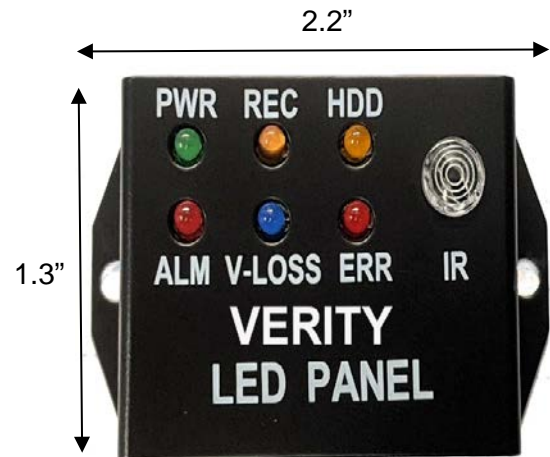

SEE PAGE 9

2024 REC02U LDV OEM INSTALL GUIDE Installation

DVR Unit



Dimensions

170 x 142 x 50mm

Including security cover 170 x187 x 50mm

Power Cable

GND Ground	DC IN+ Power Wire	ACC Ignition Hot



GND | Ground wire needs to go to a chassis ground post or proper grounding location suggested by the truck OEM.

DC IN+ | 12v. Power Wire. This wire needs to be connected to constant power. The DVR can be set to run past the ignition being turned off. (See Operation Manual for directions on setting this option.)

ACC wire is an ignition hot wire. This allows for continued recording after the truck has been turned off.

Tech support 574-807-6004 online information: www.veritysafe.com/ldv

DO NOT DUPLICATE OR GIVE TO END-USER © 2024 Subject to change

9 2024 REC02U LDV OEM INSTALL GUIDE

Placement

The remote is an IR remote, and the DVR needs to be in line sight of the DVR.



If you install the DVR behind a wall or in a cabinet, the IR remote will not work.




For these applications, our IR extender will allow you to place the DVR hidden behind a wall and use our ADD02CP. This IR/LED panel has a 16-foot extended cable. This panel provides feedback on the operation of the DVR. Never miss another recording due to issues that may occur over the years.



OPTIONAL: ADD02CP

If our LED Control Panel & IR Extender are added, there is a connector on the trigger wires.

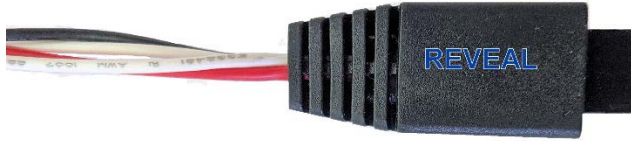

Once the ADD02P has been installed, program the DVR to accept it.

Click on
PERIPHERALS



Click on
RS485



PWR: Power light indicates when MDVR has power.

REC: Recording light indicates recording is functional.

HDD: Hard Disk Light indicates Hard Disk is functional (This does not apply to DVRs that use SD cards.)

ALM: Alarm Light indicates the following alarms: IO Linkage Alarm, Speed Alarm, G-sensor Alarm, Temperature Alarm, and HDD Error Alarm.

V-LOSS: Video lost light.

ERP: Error light indicates functioning errors.


IR: Sensor for the MDVR Remote Control.

To access, use the following:

The Baud rate needs to point to "Panel"



VIDEO | TIGGERS

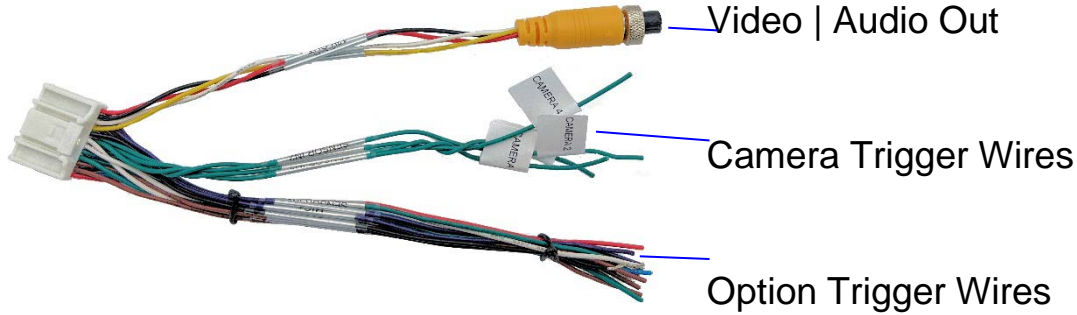

Camera trigger:
Needed triggers are tagged.

Option Trigger Wires:
These will be tagged to match added options.




Front Video | Audio Out



Do you need to change from an RCA connection to a 4-pin or BNC? Call us; we have the adaptors you require.

Connecting Harnesses

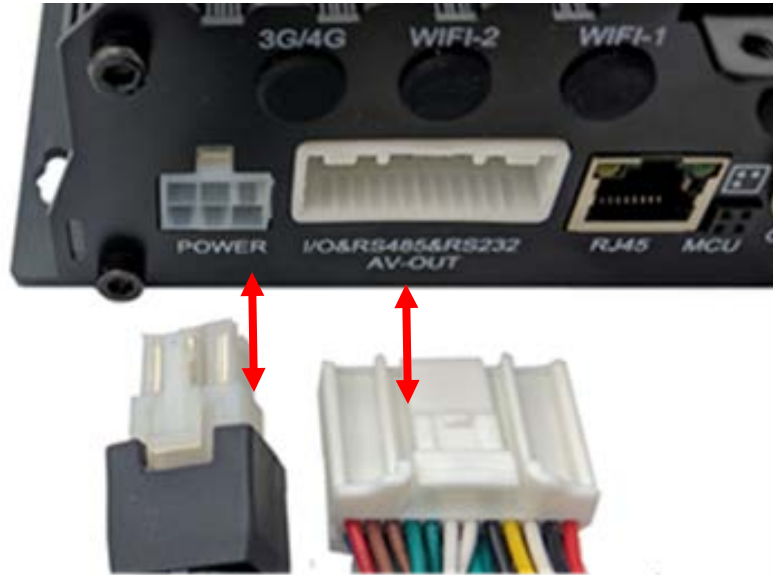

Connecting Cameras

Connect cameras to the corresponding camera IN.



Metal Connector Tamper-resistant Cover

Security cover helps prevent tampering or damage to the cable connection on the back of the MDVR.



13 2024 REC02U LDV OEM INSTALL GUIDE REC03 DVR with GPS

The installation of the REC03 has one added step. The GPS Antenna needs to be installed.



Antenna Location

The location of the antenna is Key to successful operations.

Although many say the "magnetic style" GPS antennas, which are the industry standard, are waterproof, they are not truly waterproof in many ways. Most are only IP65 rated.

We do include the magnetic-style GPS antenna as a standard feature of our systems. Most often, the antenna can simply be mounted on the truck's dashboard, near the base of the windshield. This location allows the antenna to have clear and unobstructed access to the sky. Most windshield glass should not significantly hinder reception from GPS satellites.

Acceptable GPS Signal



When the windshield angle prevents an upward or outward path to the satellite in the sky, the antenna will not work. Some bulletproof/protective glass may also impede signals. The antenna must have an unobstructed view to the satellite.




USER LOGIN (password)

IMPORTANT: DO NOT SET THE PASSWORD FOR THE END-USER

Because of security reasons, there is no password reset.

Click the login button on the remote; the login interface will appear. Please input your User Name, Password, and the menu will show up.

The default UserName is **admin**, with a default password of **888888**.

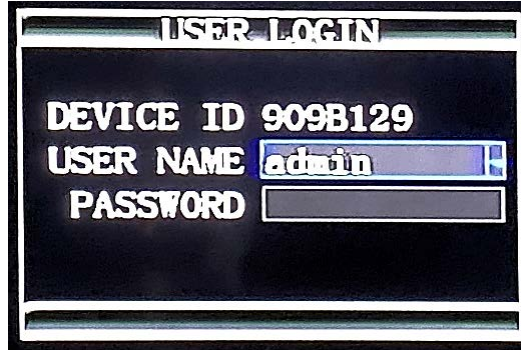

Enable – disable password



- # 1 turns password on/off
- # 2 ADD a user
- # 3 MODIFY a user
- # 4 DELETE a user
- # 5 SAVE Setting

Tech support 574-807-6004 online information: www.veritysafe.com/ldv

DO NOT DUPLICATE OR GIVE TO END-USER © 2024 Subject to change

16 2024 REC02U LDV OEM INSTALL GUIDE

M-STREAM (Sets which channels record) IMPORTANT PART OF FINAL OEM SETTINGS

To access, use the following:
Use ADMIN The password: 888888


Click on
RECORDING



Click on
M-STREAM



This screen provides the ability to configure the recording for each of the MDVR's video channels, and provides the optimum balance of Video Type, Frames per Second (FPS), Resolution, and Quality. This section will ensure the maximum file storage is achieved. The higher the FPS setting and resolution, the more storage will be required for the file.

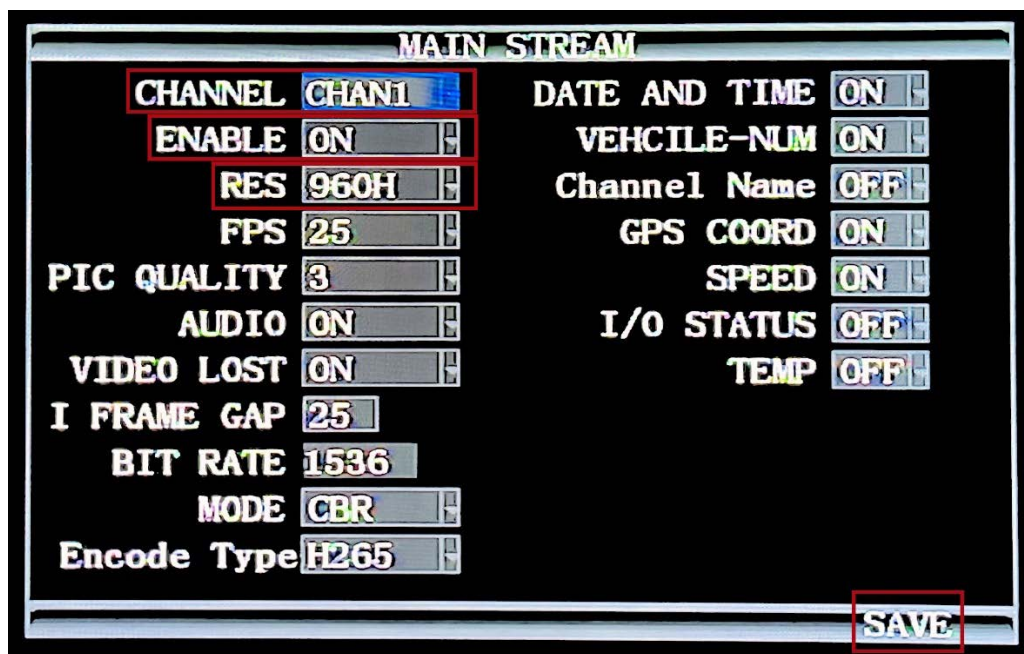

Channel: Choose specific or all video channels to modify settings

Enable: ON: Enable selected video channel recording

OFF: Disable selected video channel recording

RES: D1, HD1, CIF, **960H (960H needs to be selected)**

Tech support 574-807-6004 online information: www.veritysafe.com/ldv

DO NOT DUPLICATE OR GIVE TO END-USER © 2024 Subject to change

17 2024 REC02U LDV OEM INSTALL GUIDE

FPS: (1 to 30) Select the Frames Per Second to be recorded. The higher the number, the closer to real-time fluidity (30 FPS for NTSC and 25 FPS for PAL settings) action will be recorded. The default is 25 FPS.

PIC QUALITY: (1 to 8) Enter the record resolution setting desired with 1 being the highest quality. A higher-quality setting will require more file storage space yet supplies a more detailed video.

AUDIO: Select from two options:

ON: Enable audio recording (If selected, camera channel has a microphone connected)


OFF: Disable audio recording.

DATE & TIME (Optional OEM Setting)

Click on
BASIC



Click on
TIME

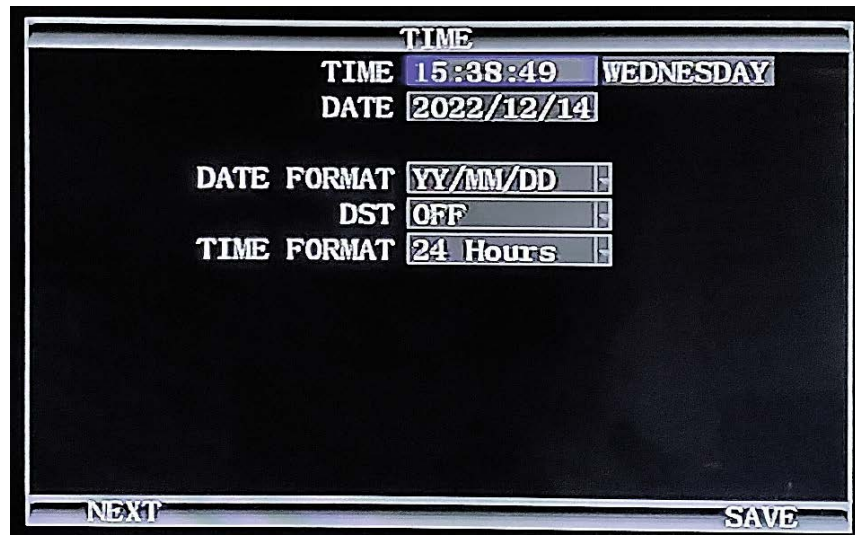

DATE TIME: THIS IS IMPORTANT for timestamping when recording. This is also necessary to allow for file searching by date and time.


Date Format: Selectable

DST: Use to set the parameters for Daylight Saving Time option.

The selected date and time will appear to the right of the section.

Time Format: 24 hr clock/military time or 12 hr. am/pm

18 2024 REC02U LDV OEM INSTALL GUIDE

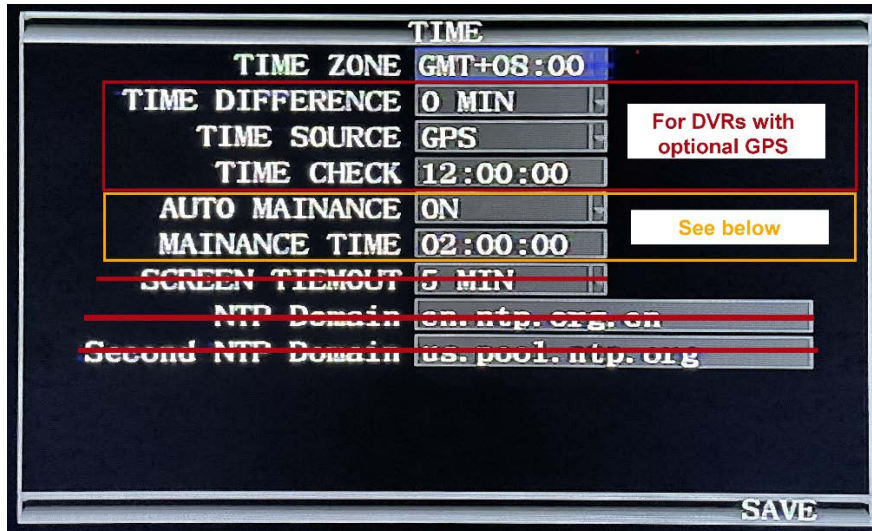

Time Zone: enter the desired GMT zone for your location

Time Source: if the unit has GPS tracking, the GPS will set the time.

Time Check: option for full option model

Auto Maintenance: leave set as default "on"

It is advised to enable the auto-maintenance feature when the device is operating for a prolonged time, allowing the device to automatically restart within the set maintenance time. **NOTE: The DVR will reboot during this time. It will stop recording during the quick reboot.**



19 2024 REC02U LDV OEM INSTALL GUIDE VEHICLE SETTING

To access, use the following:

Click on
BASIC



Click on
VEHICLE



Enter information related to the driver and company.

The DEVICE NUMBER is the only field required to have data entered.

SERIAL NUMBER: Predetermined, no input needed

BRANCH NAME: Company name (up to 20 characters)

OFFICER NAME: Driver name or ID (Up to 20 characters)

SIM NUMBER: Phone number for a MDVR contained SIM Card if installed

VEHICLE SETUP	
SERIAL NO.	0000-0000-0009-2ECO
BRANCH NAME	
OFFICER NAME	
DEVICE NO.	9092ECO
SIM NO.	
USE SIM AS DEV-ID	<input type="checkbox"/>
LICENSE PLATE NO.	00000
MILEAGE STATISTICS	OFF
ODOMETER	000000 Km
POWER MODE	ACC ON
DELAY	60 Min (0-1440Mins)
SHUTDOWN VOLTAGE	08.50V (8-11.2V)
MODIFY	
SAVE	


20 2024 REC02U LDV OEM INSTALL GUIDE

INSTALL SD CARD

Install SD Card 1: label side facing up.



Install SD Card 2: Label side facing down.

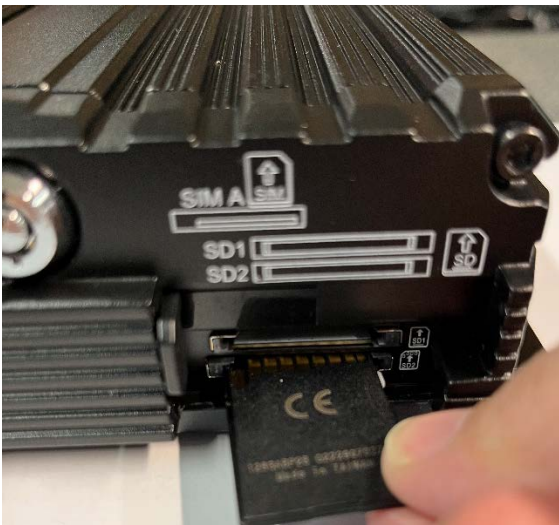

21 2024 REC02U LDV OEM INSTALL GUIDE

FORMAT SD CARD

SD card must be formatted while in the DVR

To access, use the following:

Click on
TOOLS



Click on
FORMAT



FORMAT allows for the format of the SD card(s). NOTE: SD cards need to be formatted while in the DVR to work properly.

This screen also supplies information about space available and space used.


FORMAT				
MEDIA	TOTAL	USED	FREE	OPTIONS
SD1	123.5G	3.2G	120.3G	<input checked="" type="checkbox"/>
SD2	123.5G	0.5M	123.5G	

SD Total Space Used Space Free Space

FORMAT

Select the SD Card, then choose FORMAT.

IMPORTANT NOTE: when formatting the SD card, the data on the SD Card will be erased.

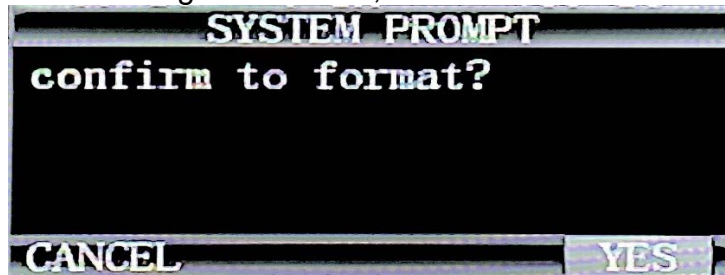

SD status is preselected to show on the screen. (See settings to change)

Unformatted

Recording

Standby

No Space

Tech support 574-807-6004 online information: www.veritysafe.com/ldv

DO NOT DUPLICATE OR GIVE TO END-USER © 2024 Subject to change

2024 REC02U LDV OEM INSTALL GUIDE

After the format is done and the system reboots, red CH1 on the camera 1 screen indicates that the recording is active for that channel. The same is true for the other channels (CH2, CH3, CH4)

If the channel icon is not in a red box "CH1", the channel is not recording.

Not recording	Recording
CH1	CH1


ADD/MODIFY USER End-user

To access, use the following.

Click on
BASIC



Click on
USER

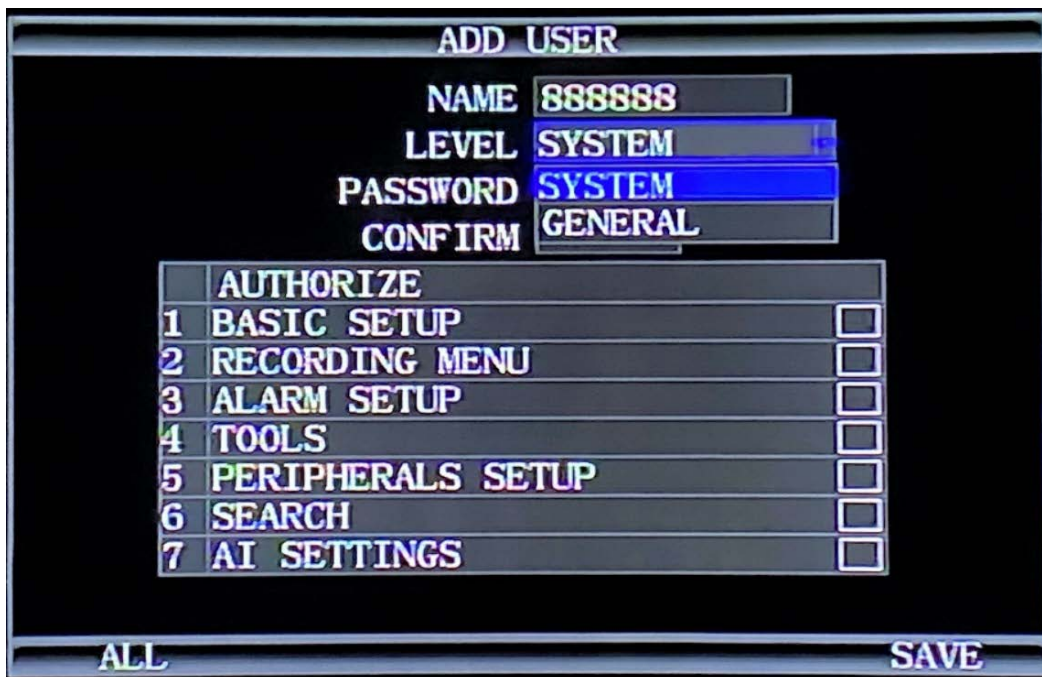

There are two levels of users:

System user: Grants unlimited access and change privileges, including creating User Accounts, Passwords, and Restricted Access Rights

General user: Provides Password, Limited Rights

Password: 6 digits (numbers only)

*Confirm the new settings are correct and save the file.

Tech support 574-807-6004 online information: www.veritysafe.com/ldv

DO NOT DUPLICATE OR GIVE TO END-USER © 2024 Subject to change

After a User Account is entered and saved, it will be necessary to login again using the new password.

Because of security reasons, there is NO RECOVERY MODE. WRITE THE NEW PASSWORD DOWN!



Note: On the opening screen, you need to select the user first if you wish to modify or delete that user.

DELETE USER End-user

To access, use the following.

Click on BASIC




Click on USER



NOTE: Once USER is deleted, it cannot be undeleted.

Select the user first, then choose DELETE.

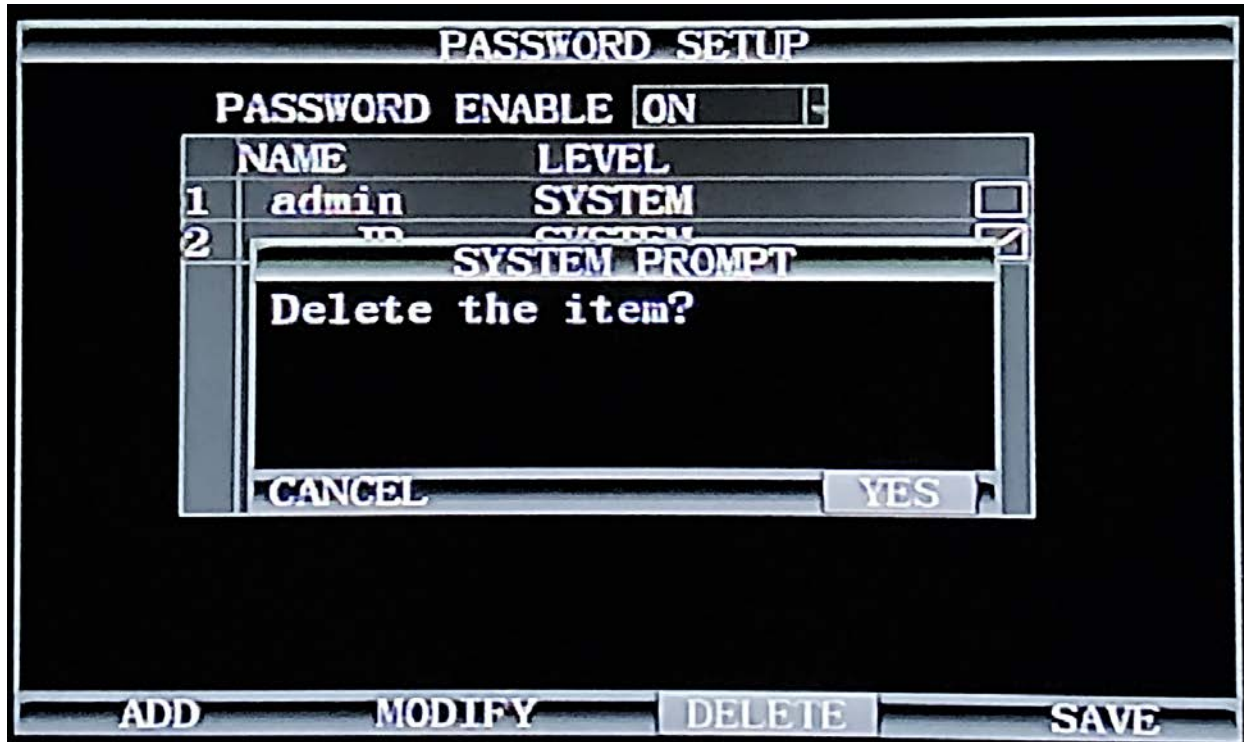

24 2024 REC02U LDV OEM INSTALL GUIDE


RECORD BASIC SETUP End-user

To access, use the following:

Click on
RECORD



Click on
RECORDING

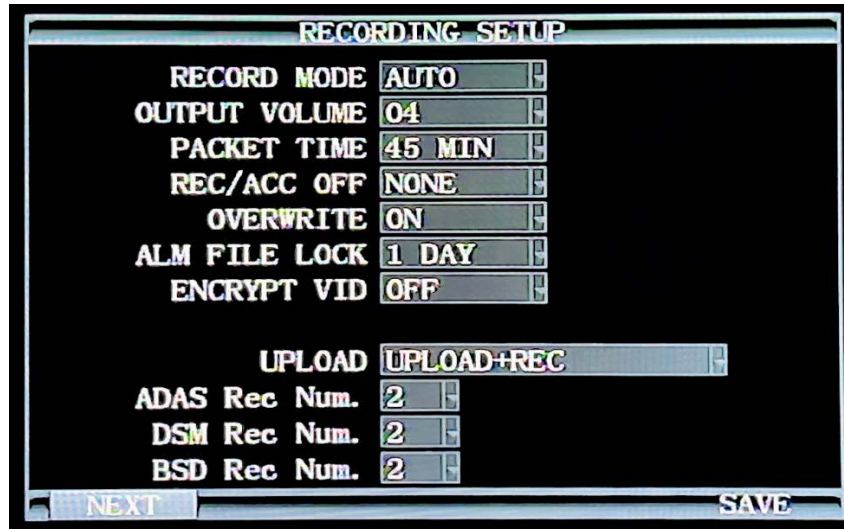

Packet Time: Playback file sizes. Select from 5, 15, 30, 45, 60-minute files.

The factory default is 45 mins.

Overwrite: Allows the MDVR to continue recording over the oldest file.


ALM FILE LOCK does not apply

REC/ACC OFF: Allows selection of the camera view(s) which WILL NOT be recorded when the vehicle is in the **ACC mode**

NONE: Every camera view will be recorded per preset parameters. *Factory preset and recommended*

ALL: Every camera's view *will not be recorded*

CH: Choose a single specific camera view to not be recorded

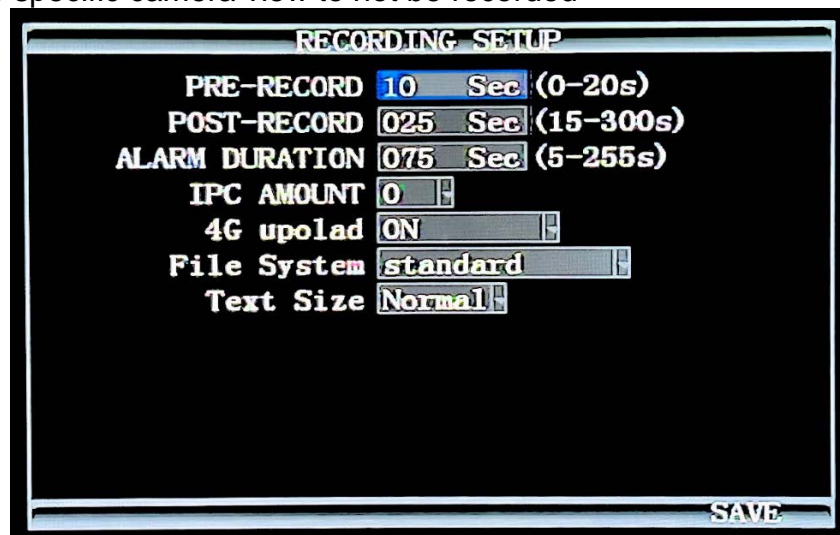

Tech support 574-807-6004 online information: www.veritysafe.com/ldv

DO NOT DUPLICATE OR GIVE TO END-USER © 2024 Subject to change

25 2024 REC02U LDV OEM INSTALL GUIDE RECORDING SCHEDULE End-user

To access, use the following:

Click on
RECORD



Click on
SCHEDULE



The default setting is to record whenever the MDVR is powered. The first option allows for setting the same period of time for all seven days of the week. The following enables setting a period of time for each day.

RECORDING SCHEDULE		
PERIOD	START	END
1		
EVERY DAY	00:00:00	00:00:00
MONDAY	00:00:00	00:00:00
TUESDAY	00:00:00	00:00:00
WEDNESDAY	00:00:00	00:00:00
THURSDAY	00:00:00	00:00:00
FRIDAY	00:00:00	00:00:00
SATURDAY	00:00:00	00:00:00
SUNDAY	00:00:00	00:00:00

Everyday:
Schedules
entire week

Mon-Fri: Allows
for daily
scheduling

SAVE

26 2024 REC02U LDV OEM INSTALL GUIDE

DISPLAY SETUP End-user

To access, use the following:

Click on
BASIC



Click on
DISPLAY




Select what information is desired to display on the screen. Some features like GPS will not display properly unless the DVR has the GPS option.

Speed need GPS


Temperature: Optional

Vehicle-num: Displays the vehicle number.

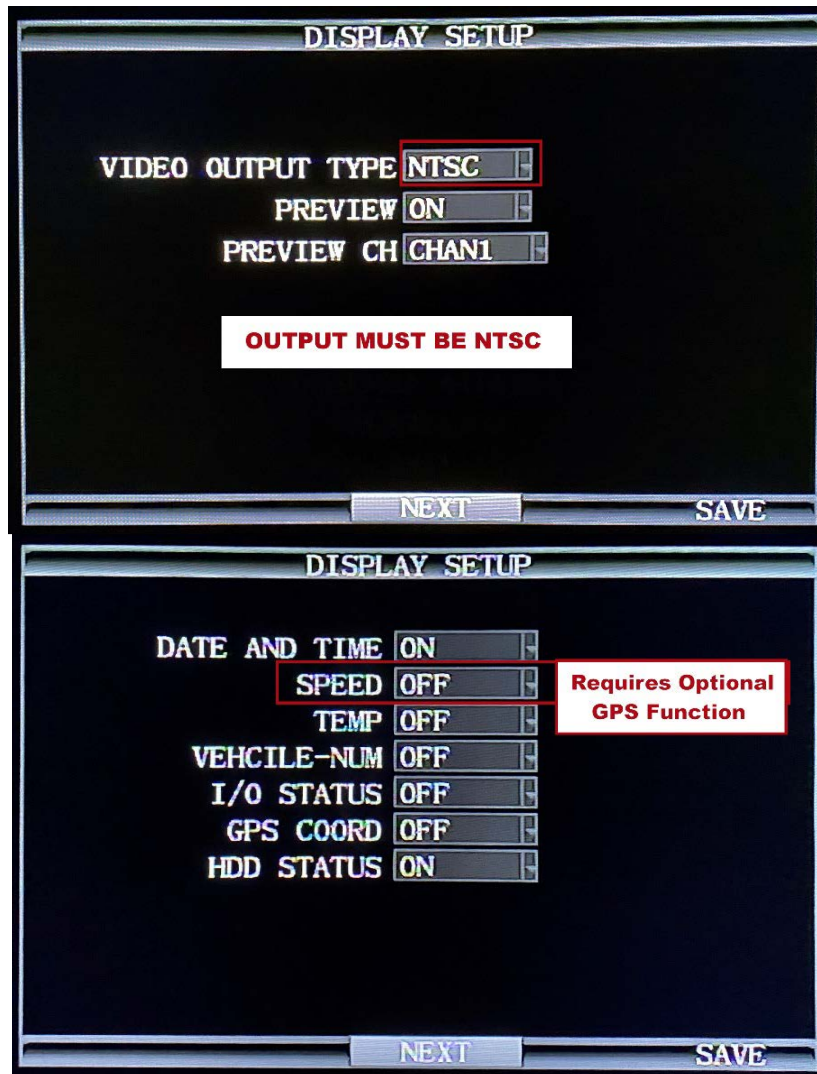

27 2024 REC02U LDV OEM INSTALL GUIDE

DISPLAY: Choose how many channels will show on screen. Enable/Disable Audio by drop-down list ON/OFF.

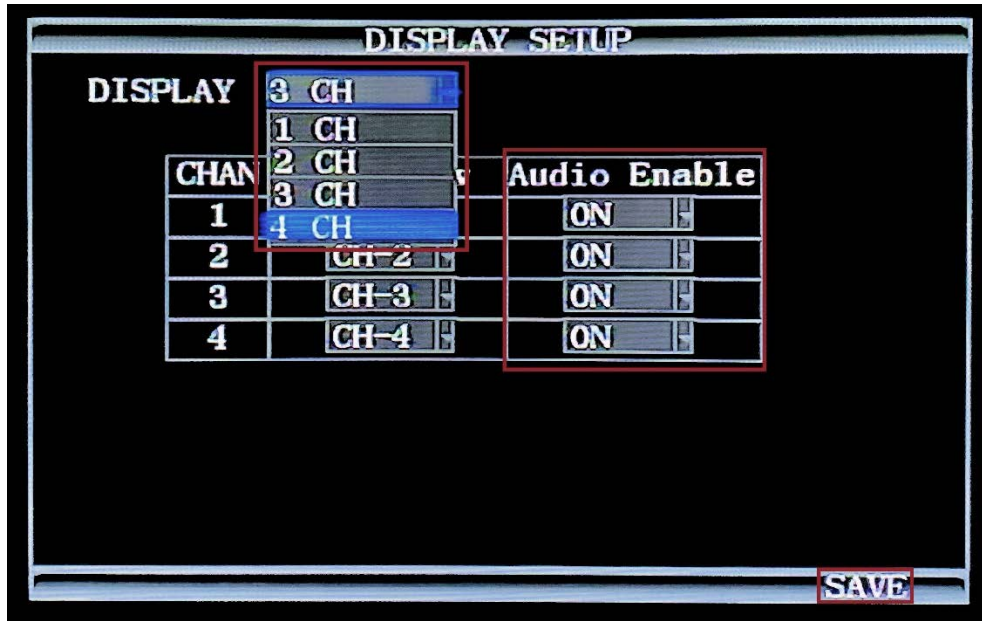

NOTE: VIDEO LOSS will display when no camera is connected, or the video signal is lost from the camera. A damaged cable can cause video loss from a camera.



The screen will display as follows:



1 Screen



2 Screen



3 Screen



4 Screen

29 2024 REC02U LDV OEM INSTALL GUIDE FLIP MIRROR IMAGING

To access, use the following:

Click on
BASIC



Click on
FLIP



Select the desired image orientation by turning on and off the MIRROR and FLIP settings.



TRIGGER ACTIVATION

To access, use the following:

Click on
ALARMS



Click on
SENSORS




Each sensor(channel) will need to have ENABLE turned on for the camera to receive signal from the MDVR when activated by the trigger wire.

In the SENSOR SETUP screen, scroll down to ENABLE




31 2024 REC02U LDV OEM INSTALL GUIDE


ENABLE will need to be turned ON from the dropdown menu.

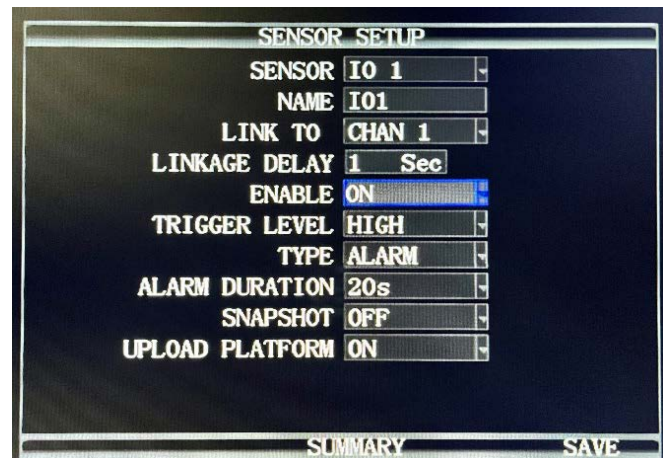

After turning ENABLE to the ON option, scroll to the bottom right and confirm SAVE.

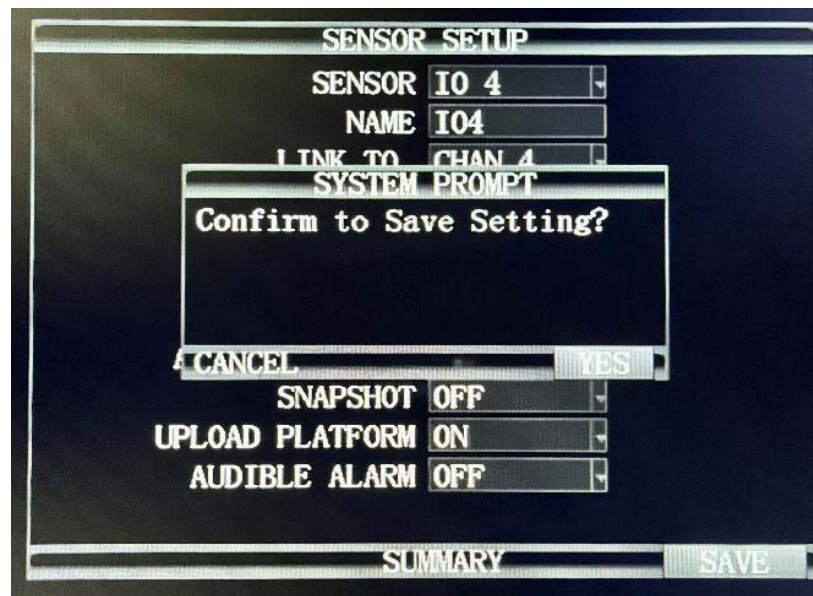

Note: This process will need to be repeated for each SENSOR by selecting each SENSOR at the very top of the SENSOR SETUP. It will display a dropdown. Select each SENSOR (channel) one at a time and repeat. **DO THIS FOR IO1-IO4.**

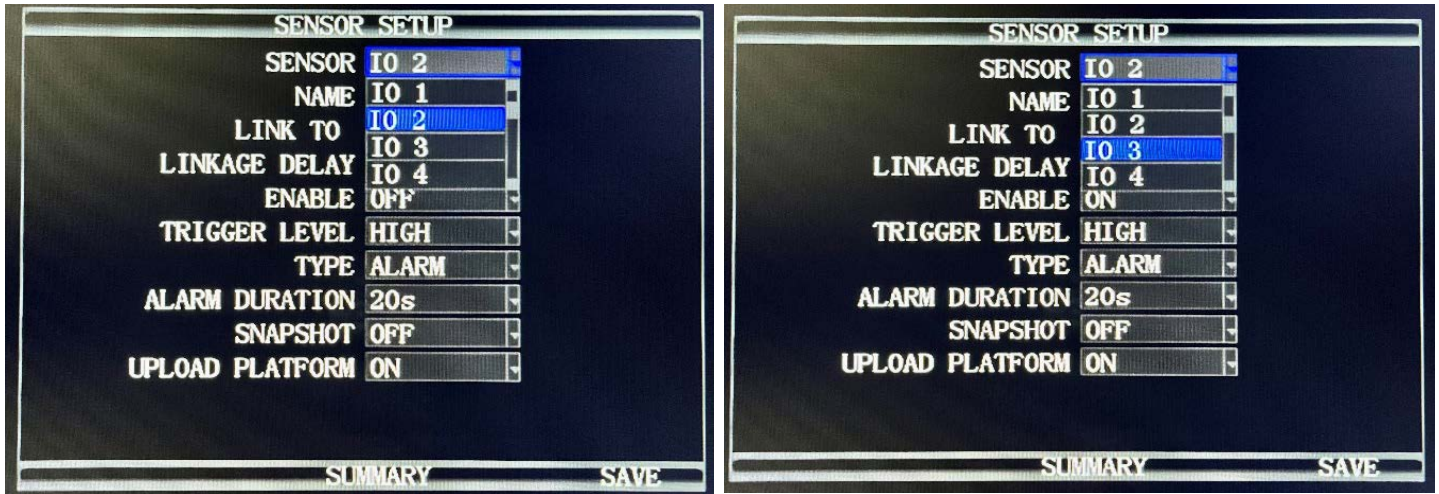

Verify that all channels have ENABLE turned ON before exiting the menu.

G-SENSOR SET-UP

To access, use the following:

Click on
ALARMS




Click on
G-SENSOR




G-SENSOR SETUP (accelerometer) enables the REC02U to monitor the movement of the vehicle via 3 Axis (X, Y, Z). These axes can be used to trigger a response based on the trigger values set in the G Sensor Menu. Readings from the sensor may indicate hard braking, acceleration, impact, sharp turns, etc. This information helps evaluate driver and vehicle performance along with load dynamics.

The three AXIS of movement of the monitored vehicle are:

- X = ROLL Possible high speed. Load-causing vehicle shift
- Y = PITCH Possible Hard braking or acceleration, speed bumps, etc.
- Z = YAW Possible bad shocks, uneven road surface or unsecured load, etc.

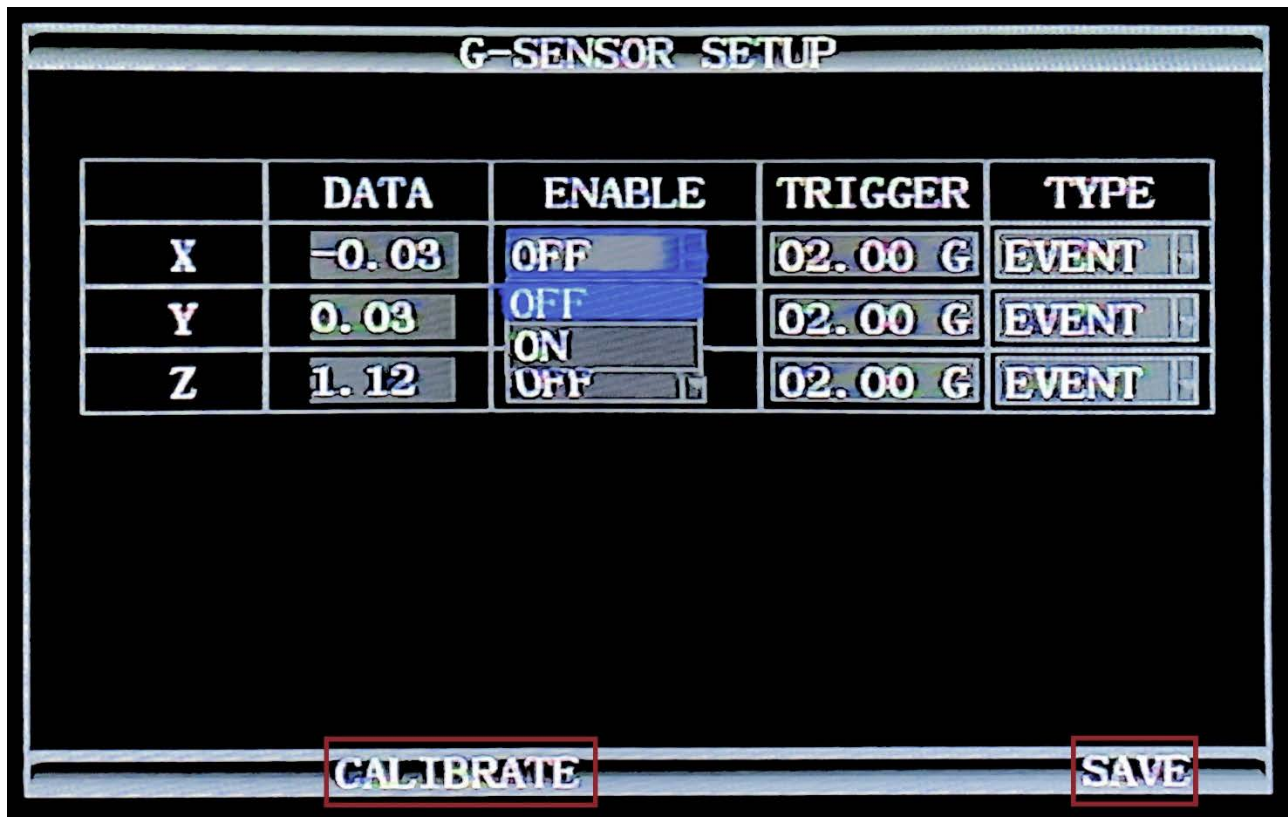

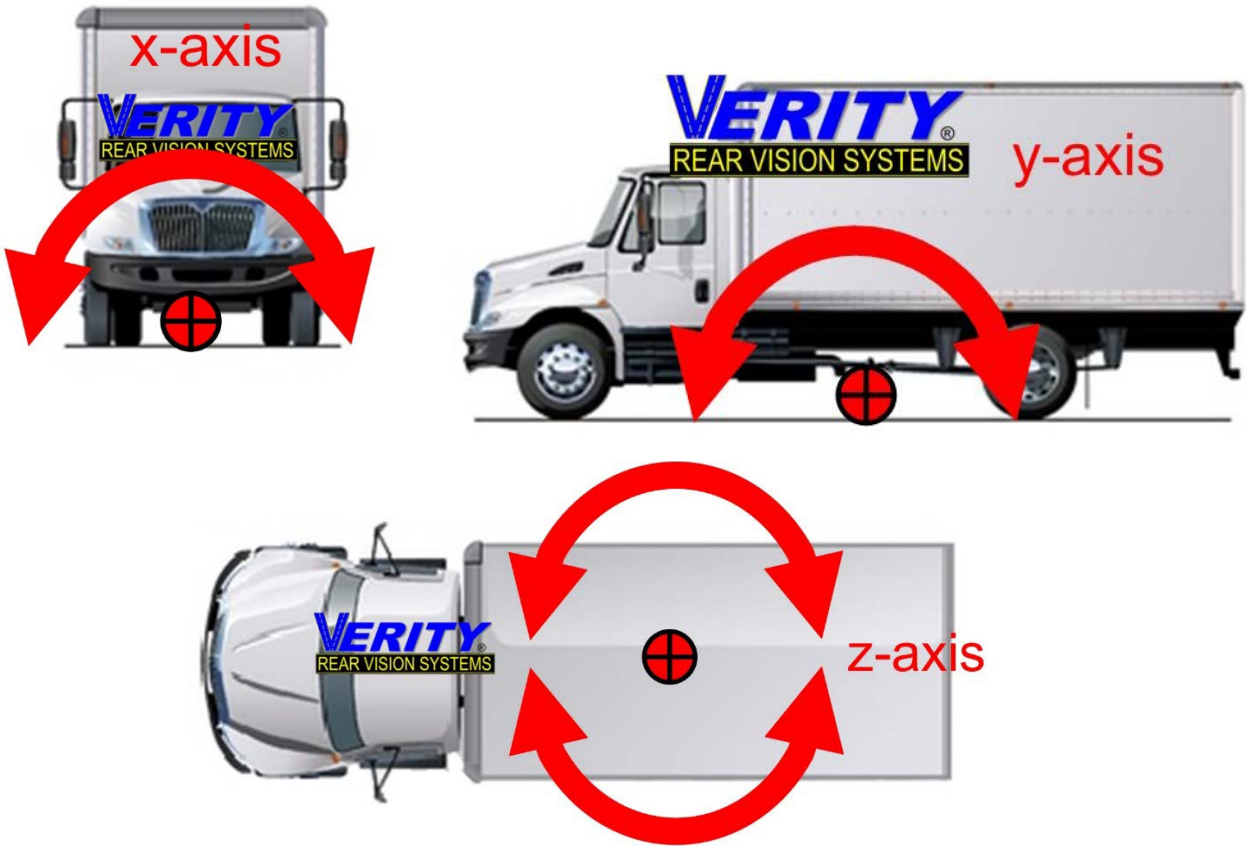

DATA: displays the current G Force reading for each Axis

ENABLE: Select from two options: ON – OFF

TRIGGER (THRESHOLD) Enter the G Force setting at which to trigger a response

TYPE Select the Type of Trigger response required:

ALARM: Sends a trigger to generate an alarm that can be searched

EVENT: Sends a trigger to enter a message in the ALARM/EVENT Log

CALIBRATE Select after installing the REC02U to calibrate the G Sensor

35 2024 REC02U LDV OEM INSTALL GUIDE SEARCH OPTIONS

The VIDEO SEARCH and SEARCH LOG Menu allows the search of all logged events or to search for specific events the MDVR recorded on the installed SD card.

The colored grid shown lists the days of the search month. To expedite file searches, days with recordings available have been highlighted.

Click on
SEARCH



Click on
VIDEO



SEARCH DATE: Enter the date to be searched

START TIME: Enter the Start Time in 24-hour format for the files to be searched

END TIME: Enter the End Time in 24-hour format for the files to be searched

PATH: Choose recording from SD 1 or SD 2

TYPE: Select from system recordings or alarm recordings

CHANNEL: Search recordings from a specific channel



SEARCH LOG: search log activities. Allows viewing alarms such as G-Sensor triggered events

